



Underwater Fishing Camera Manual Guide



www.luckysonar.com

YY means year, MM means month, DD means day.

YY/MM/DD DD/MM/YY MM/DD/YY

For example: after selecting a format, click ENTER to set the second line of numbers. Press the **▲** to increase number, **▼** to reduce number. After setting the year, press ENTER to enter the month setting. The setting method of other numbers is the same as the setting method of the year.

YY/MM/DD
2022/01/09
03:53:01

(5) Video Parameter: we have 4 video parameters for you to choose from. They are Soft, Standard, Colorful, and Custom.

Video Parameter
Soft
Standard
Colorful
Custom
OK Setting [M]Exit

In Custom, you can set the Brightness, Contrast, Saturation and Sharpness according to your needs.

Custom
Brightness
Contrast
Saturation
Sharpness
OK Setting [M]Exit

5.2 Function setting



Catalog

- | | |
|--------------------|--------------------------------|
| 1.Overview | 6.Operating instructions |
| 2.Precautions | 7.Standard configuration table |
| 3.Main function | 8.Safety information |
| 4.Main components | 9.Maintenance and service |
| 5.Function setting | 10.Specification |

1.Overview

This product is specially designed and developed for the fishing enthusiasts and the professional fishery operation through using advanced science and technology. The use of this product can find and observe the position and the direction of movement of the underwater shoal of fish, and judge the species, size and the number of the fish through the display device, and also can observe the position and the situation of fish bite. Therefore, this product is the most ideal assistant for fishing, and it also can help you to catch more fish easily.

2.Precautions

- (1) It is necessary to charge the built-in lithium battery for more than 8 hours before using this machine for the first time.
- (2) Do not remove the monitor of the host machine at will avoid accidents and cause loss by human error.
- (3) Make sure that the plug of the camera has been reliably plugged into the corresponding plug of the host monitor, and then switch on the supply power of the monitor.

3.Main function

(1) The camera adopts the high-definition camera module with 1/4 inch and 300,000 pixels to take an image; The image is clear, and the color reproduction is real and verisimilar. The low-level lighting of the camera is 0.1 LUX, and the resolution reaches up to 420 TV lines. The camera combines with six infrared LED lights; This combination can guarantee to observe the dynamic trend of the underwater shoal of fish in the extremely dark underwater environment. The power cord is made from special imported materials which are extremely soft and have high tensile strength. Although the wire diameter is only 2 mm, it can resist the tensile force above 15 kg.

(2) The monitor adopts 4.3 inch LCD screen. The monitor has the function of recording, photos-taking, video playback, viewing pictures, and connecting to the computer to copy videos.

4.Main components

4.1 Monitor



- Infrared LED lights can be freely on/off. Press left button to turn on, press right button to turn off.

4.2 Accessories



5. Setting

5.1 Menu setting

(1)Format: press ENTER to enter the setting, and click Yes to reconfirm the interface, please make sure that you have backed up your videos or photos before formatting. Press the MENU to return to the main interface.



(2) Language: we have 9 languages for you to choose from, you can set it according to your needs.English, Deutsch, Français, Italiano, Español, Русский, 简体中文, 日本語, 한국어.



(3) Default Setting: click Yes to restore the original parameter settings of the host.



(4) Set Date: to make it more convenient for people in different regions to use, our time can be adjusted and set. You can set the time according to your needs. After entering the Set Date, we have 3 formats for you to choose from. Press the **◀** and **▶** to toggle selection.



YY means year, MM means month, DD means day.

YY/MM/DD DD/MM/YY MM/DD/YY

For example: after selecting a format, click ENTER to set the second line of numbers. Press the **▲** to increase number, **▼** to reduce number. After setting the year, press ENTER to enter the month setting. The setting method of other numbers is the same as the setting method of the year.

YY/MM/DD
2022/01/09
03:53:01

(5) Video Parameter: we have 4 video parameters for you to choose from. They are Soft, Standard, Colorful, and Custom.

Video Parameter
Soft
Standard
Colorful
Custom
OK Setting [M]Exit

In Custom, you can set the Brightness, Contrast, Saturation and Sharpness according to your needs.

Custom
Brightness
Contrast
Saturation
Sharpness
OK Setting [M]Exit

5.2 Function setting



(1) MENU button: press the MENU button in photographing or video recording mode to enter the menu settings. The menu settings include format, language, the default setting, set date, and video parameters.

(2) Mode --- MODE menu: each time the MODE key is pressed, it is a cycle conversion among three modes of photographing, video recording, and file browsing.

(3) Confirmation---ENTER key: in photographing mode, every time the ENTER key is pressed, it will take a photo; In video recording mode, press the ENTER key once to start recording, and then press it again to stop recording and save it, and then the same cycle of operation.

(4) Left button: in file browsing mode, press once to scroll forward; When setting the menu, press once to select upward.

(5) Right button: in file browsing mode, press once to scroll backward; When setting the menu, press once to select downward.

6.Operation instruction

(1) Please turn on the orange switch at the back of the monitor first before using this machine. Press the ON button once, the switch will be on, and press again, and the switch will be off. Such repeated operation is the switching program for this machine. Only this switch is on, the monitor can be started. If this machine does not been use for long a time, please turn off this switch. In this way, it can avoid the loss of battery power.

(2) Then, plug the golden plug of the camera into the socket on the top of the monitor, and please make sure that the plug has been plugged properly.

(3) After the power supply is on, the monitor will show the real-time picture of the image.

7.Standard configuration table

Name	Quantity
Handheld monitor	one piece
Underwater camera	one set
Instruction	one volume
Warranty card	one volume

8.Safety information

(1) Please don't use this machine at high temperature, bring light and strong electromagnetic field, etc.

(2) Please turn off the machine before entering the place where the explosion will occur easily due to the potential factors. In these places, please do not remove, install the battery or charge the battery. In such environments where the explosion may occur, the sparks may cause an explosion or fire, and cause personal injury or death.

Note: The above-mentioned places where the explosion may occur should include: fuel area (such as under the ship's deck, transportation and storage facilities of the fuel or the chemicals), the places where chemical substances and particles spread in the air (such as particle, dust or metal powder). The places where the explosion hazard may exist will be marked usually, but not all the places are marked by these signs.

(3) Please keep the machine and charger in the place where the children can't reach, and the rubber plug of the host machine and other accessories may cause asphyxia due to the blockage of the trachea.

(4) For your safety, please use the original charger.

(5) Please use the charger indoors, do not keep the charger in the place easy access to water, such as the windowsill.

(6) The charger is non-waterproof, please don't keep and use it in too moist places, such as the kitchen and bathroom; Or don't keep and use it in places where corrosive gases occur. Otherwise, it may cause an electric shock, explosion, or burning accident.

(7) If the machine is unused for a long time, it may not start smoothly, please start again after charging for some time.

(8) Please don't operate the machine continuously for a long time in the strong sunlight. In this case, it will bring about damage to the liquid crystal. It is better to use the machine at 50 °C ambient temperature or no less than -10 °C.

9.Maintenance and service

9.1 Monitor

(1)Although the machine has a high waterproof grade, for the sake of safety, please keep the machine dry. The rain, moisture, and liquid contain many minerals and will cause the circuit corrosion of the machine.

(2)Please do not keep the machine in a dirty and dusty place.

(3)Please do not use or keep the machine at a high temperature. The high temperature will shorten the service life of the electronic components, damage the battery and deform or melt some plastic parts.

(4) Do not use or keep this machine in a supercooled place. When the machine is at normal temperature, the moisture will condense within the machine, and cause damage to the circuit board.

(5) Do not disassemble the machine at your own discretion; The nonprofessional treatment may damage the machine. When the machine breaks down, please connect with Lucky dealers or the salesmen for the after-sales service.

(6) Please avoid falling off, beating, and vibrating the machine; The inappropriate external force will bring about damage to the circuit and LCD monitor within the machine.

(7) Do not use chemical solvents or cleaning agents to clean the machine. If you want to clean the machine, please use soft cotton fabrics with water or neutral soap to wipe the machine casing gently. Please be sure to pull out all the cables when cleaning the machine.

(8) Do not use the painting to paint the machine. The pigment may block the machine components, and affect the normal operation accordingly.

9.2 Built-in lithium battery

(1) The lithium batteries can be charged and discharged hundreds of time, but will fail eventually. When the battery life is significantly shortened, you must purchase and replace the new battery.

(2) When the charger isn't in use, please pull it out from the power socket outlet. Please don't connect the fully-charged machine with the charger for a long time, because the overcharge will shorten the battery life.

(3) After the battery power is used out, the machine will switch off automatically. Please note to charge in time.

(4) In battery charging, due to the battery temperature will rise, please do not put the machine together with the inflammable (such as the head of a bed, clothes, and books, etc.), to avoid catching fire. In battery charging, please keep the machine in the open space, not allowed to be covered.

(5) Do not put the machine into the fire, or put it in extremely hot place, in case of a battery explosion.

(6) To prolong the service life of the machine battery, please keep

the battery power in full state. When it isn't in use, please wrap the machine with the non-conducting materials after charging the machine (in a half-full state), and put it in a cool, dry, and dark place. The storage time is no more than a month. A month later, please recharge it.

(7) If the power line or the socket of the charger has worn or damage; The charger is caught in the rain or dampened seriously; The charger case is broken; You want to clean the charger; As long as one of the above-mentioned situations occurs, please pull out the charger plug immediately.

10.Specification

(1) Display: 4.3 inch LCD

(2) Used for fishing, diving, swimming, and other outdoor sports

(3) 6 infrared LED lights design, providing a wider underwater vision range

(4) Visible angle: 185 degrees

(5) Max cable length: 20m

(6) Power: 3.7V rechargeable lithium batteries

(7) Operational temperature: 14°F to 122°F(-10°C to 50°C)